



# REMOTE CONTROL

## How to use the remote control?

### KEYS


PARAMETERS FOR GC 304, GC 362, GC 363, GC 333, GC 339

- A** External monitoring / test
- B** IR-detection field
- C** Uncovered zone
- D** Mounting height / Frequency
- F1** Output redirection
- F2** Door control
- Detection field size
- Hold time
- Detection mode
- Radar immunity filter
- Output configuration
- Max. duration of presence detection
- IR-immunity filter



\* not used

VALUES

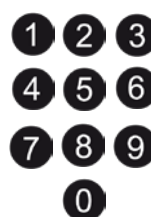

GENERAL KEYS

- Unlock
- Lock
- Check value
- Increase by 1
- Decrease by 1
- Setup / Teach-in  
Factory values  
Presettings



After unlocking, the red LED flashes and the sensor can be adjusted by remote control.




If the red LED flashes quickly after unlocking, you need to enter an access code from 1 to 4 digits.




To end an adjustment session, always lock the sensor.

### ADJUSTING ONE OR MORE PARAMETERS

 


### CHECKING A VALUE

 


X = number of flashes = value of the parameter

### RESTORING TO FACTORY VALUES

 


\* When no green LED is available, the signal is red.

### SAVING AN ACCESS CODE

 


The access code (1-4 digits) is recommended to set sensors that are installed close to each other.

### CHANGING AN ACCESS CODE

 


Enter the existing code

### DELETING AN ACCESS CODE

 

Enter the existing code

 If you forget the access code, proceed as follows:



Unpower & power the sensor

1 Min.

During 1 minute, you can access the sensor without access code

